

## Removing Mercury Switches


### Removing mercury hood and trunk convenience lights

In some instances (such as many GM vehicles), leaving the assembly intact and removing the pellet may be easier than removing the assembly.

1. Check for hood and trunk convenience lights on these cars and trucks:

<b>GM</b>	<b>2002 and older</b>
<b>Ford</b>	<b>2001 and older</b>
<b>DaimlerChrysler</b>	<b>1998 and older</b>
<b>Volvo</b>	<b>1991 and older</b>
<b>Audi 100</b>	<b>1977-1988</b>
<b>Audi 200</b>	<b>1980-1988</b>
<b>Mazda Navajo</b>	<b>1993-1997</b>
<b>Mazda B-Series Pickup</b>	<b>1995-1999</b>

2. Disconnect the battery.
3. Find the small light fixture on the underside of the hood or trunk.
4. Cut the power supply wire to the fixture.
5. Remove any fasteners to separate light assembly from vehicle.

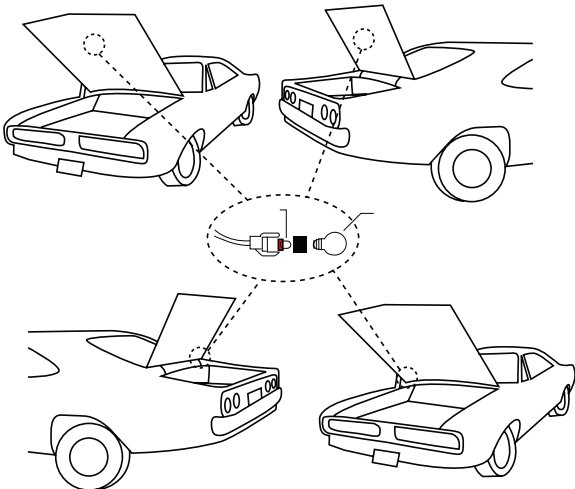

## Removing Mercury ABS G-Force Sensors

1. Check for the mercury ABS G-Force Sensor on these cars and trucks:

### Audi

1987-1993	Audi 80/90
1987-1993	Audi 100/Avant
1989-1995	Audi V8
1987-1991	Audi 200
1987-1992	Audi Coupe quattro®

### DaimlerChrysler

1992-1996	Dodge Stealth 4WD
1992-2001	Jeep® Cherokee
1992-2001	Jeep® Grand Cherokee
1992-2003	Jeep® Wrangler

### Ford Motor Co.

1992-1997	Ford Bronco
1993-2002	Ford Explorer & Mazda Navajo
1995-2001	Ford Ranger 4x4 & Mazda B-Series Pickup
1997-2002	Mercury Mountaineer AWD

### Mitsubishi

1991-1994	3000 GT 4WD
1990-1992	Galant 4WD
1991-1993	Expo 4WD
1991-1993	Expo LVR 4WD
1991-1993	Eclipse 4WD

### Nissan


1996	Pathfinder 4x4
------	----------------

### Subaru

1990-1995	Legacy AWD with 5MT
1993-1996	Impreza AWD with 5MT

The ABS G-Force Sensor contains either two or three mercury switch capsules embedded in the assembly.

2. Disconnect the battery.
3. Locate the ABS G-Force Sensor on the vehicle (varies on different vehicles).
4. Remove sensor. Please note: Do not attempt to remove pellets from mercury ABS G-Force Sensors. Place the entire assembly in the bucket.

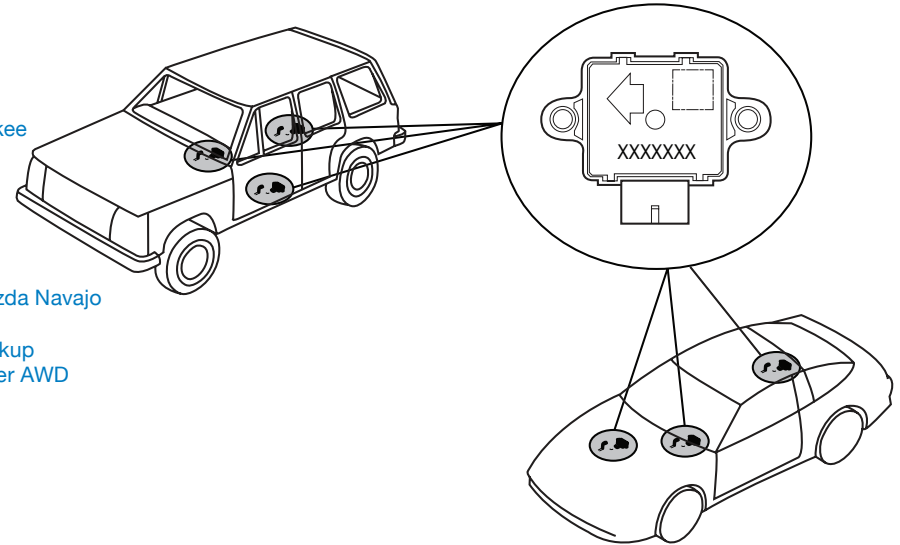

The locations where the mercury ABS G-Force Sensor is commonly found are on the drive tunnel; below the rear seat on the floor pan; on the right front wheel apron; and on the left frame rail below the driver's seat.

## Recycling Mercury Switches

### Collecting and managing assemblies and pellets:

1. Determine if the vehicle should be checked for a switch assembly. If unsure, check the list of likely vehicle years, makes and models provided.
2. If yes, see removal instructions on the opposite panel.
3. Remove the entire assembly. If the state requires pellet removal, then remove the metal pellet from the assembly if possible.
4. Place the assembly and/or pellets in the plastic bucket. Properly labeled containers with airtight lids will be provided.
5. Replace the lid after each pellet or assembly is added.

Please be sure you are handling the switches in accordance with your state's waste handling requirements.

## Program Information

Feel free to contact us for more information, or to give us your feedback.

### By Mail:

End of Life Vehicle Solutions (ELVS)  
PO Box 3282  
Farmington Hills, MI 48333-3282

### By Phone:

877-225-ELVS  
248-788-6656

### By E-mail:

[info@elvsolutions.org](mailto:info@elvsolutions.org)

### Online:

[www.elvsolutions.org](http://www.elvsolutions.org)

# ELVS

end of life vehicle solutions

## A Quick Guide for Removing and Recycling Mercury Switches